

Product No.: 12058

Separate Mixing Device for Spiral Pumps



The separate mixing device for spiral pumps can be placed next to the spiral pump. So the material is perfectly mixed first and then it can be poured easily from the mixing container into the material container of the pump.

Technical data

Supply	230 V
Motor power	1.1 kW
Speed - infinitely variable	0 - 450 rpm
Filling height	104 cm
Weight	38 kg
Height / width / length - working position	(cm) 148 / 75 / 90

Delivery range

moving device, motor with 1 pair of countermoving mixing tools, 75 litre material container, mixing device holder with articulated arm and tilting device

Advantages

- High mixing capacity
- Perfect mixing of the material
- Easy pouring from one container into the other
- Upright posture during the mixing process


Material to be used

- Injection mortar
- Cement paste
- Cement suspension
- Machine usable jointing mortar
- Sealing slurries
-

- Fine filler



Mixing device tilted

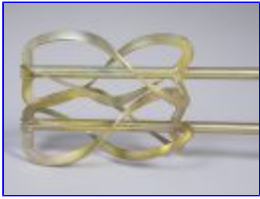

Mixing tools

[PDF](#)

